


3825L Semi-Auto Flush Bolt Changing the Handing on a 3825L

The 3825L Semi-Auto Flush Bolts all come standard with right-hand assembly. In order to change the flush bolt to left-hand, follow the few easy steps below:

1

Your product will come with a bag of components and screws. Find the bolt that looks similar to the one on the 3825L.



You will need to switch the left-handed bolt in the bag with the right-handed one assembled at the factory.

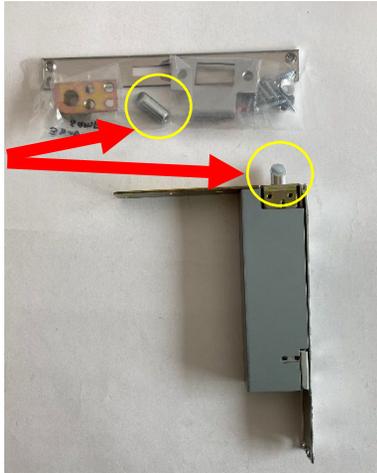

2

Remove the three screws that attach the top bracket to the assembly.


Next, unscrew the bolt and replace it with the left-handed version from the package.

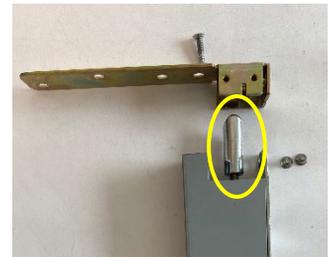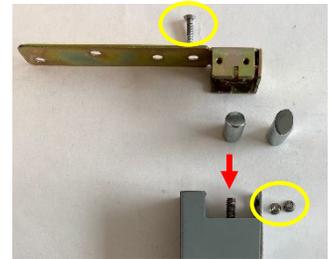

3


Align the flat side of the bolt with the flat side of the hole in the top bracket.

Loosely tighten down the screws... The screw on the top bracket may seem loose but this is normal. The two smaller screws can be tightened snugly.

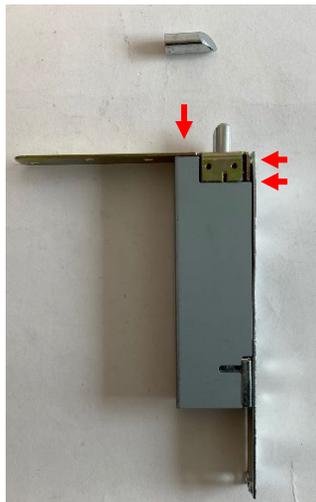

4

Lift the flush bolt finger to test that the handed bolt is flush with the top bracket. The bolt may need to be screwed further down on the threaded rod so that it is not protruding above the bracket when the finger is lifted.

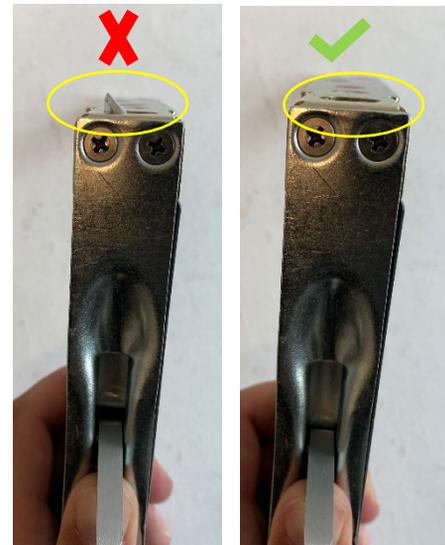

Questions? Contact Trimco CSR:

Email: CSR@trimcohardware.com

Phone: 323.262.4191