

INSTRUCTIONS: IF PRINTING TEMPLATE OFF THE INTERNET, MAKE SURE TO PRINT AT A 1:1 SCALE ON 8.5"X11" STANDARD PAPER. EACH PAGE IS FOR EACH LOCK MANUFACTURER TYPE IN THE 9 SERIES. STRIKE PREP SHOWN ONLY. FOR MORTISE LOCK DOOR PREP SEE DRAWING# 21686 FOR FULL INSTRUCTIONAL GUIDE SEE INSTRUCTION TEMPLATE# 21687

NOTES:

- ALL DIMENSIONS ARE IN INCHES.
- PREP IS FOR STANDARD DOOR THICKNESS
- DIMENSIONS DO NOT PROVIDE ALLOWANCES FOR ADDITIONS TO FRAME

TABLE OF CONTENTS


(C) CORBIN RUSSW	IN ML SERIES	SHEET 2
(B) BEST 40H SERIE	S	SHEET 3
	SARGENT 8200 SERIES.	


TEMPLATE# 21690	SHEET	1 OF 4	TRIANGLE BRASS MANUFACTURING
REVISION# 01	This template is provided for use only on the job for which it was requested. Trimco reserves the right to make design		1351 ROCKY POINT DRIVE OCEANSIDE, CA 92056
APPROVED ON: 9/28/2020	changes without notice. Trimco will not be responsible for errors or damage caused by the use of out-of-date templates.		WWW.TRIMCOHARDWARE.COM



9 SERIES MORTISE LOCK LEVER SET STRIKE DOOR PREP TEMPLATE

CORBIN RUSSWIN ML SERIES DOOR PREP

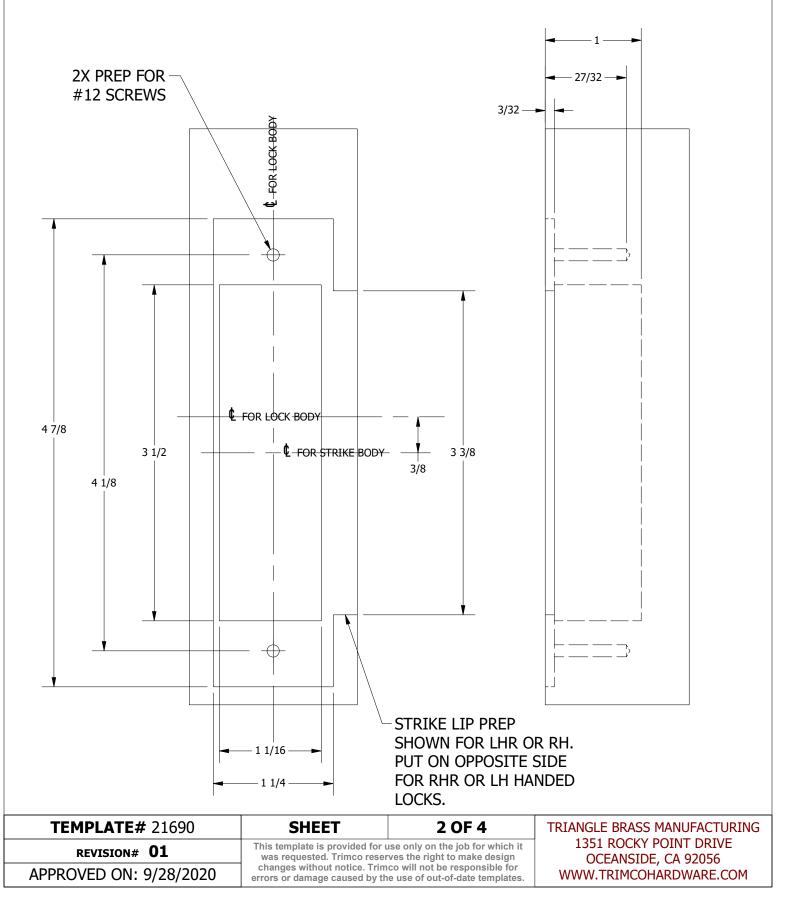

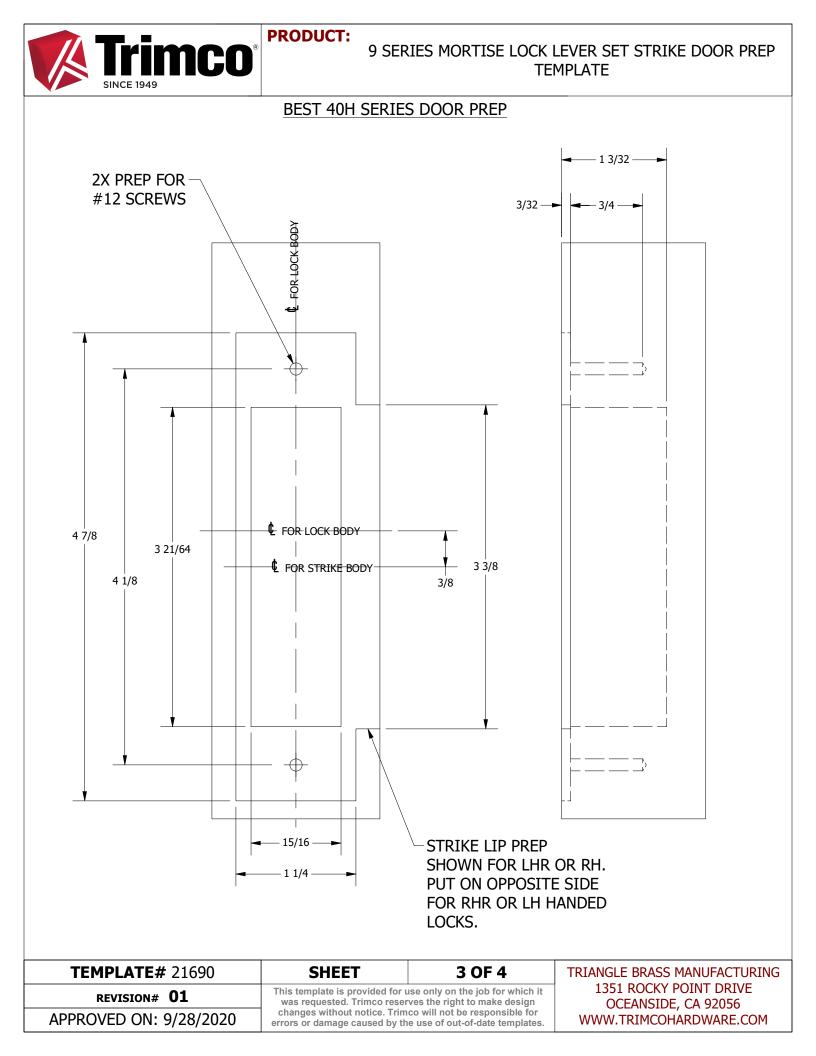



9 SERIES MORTISE LOCK LEVER SET STRIKE DOOR PREP TEMPLATE

