




# Trimco®

SINCE 1949

TRIANGLE BRASS MANUFACTURING  
1351 ROCKY POINT DRIVE, OCEANSIDE, CA 92056  
WWW.TRIMCOHARDWARE.COM  
CSR@TRIMCOHARDWARE.COM  
323.262.4191

### STEP 1


DRILL E-MOUNT HOLE IN DOOR. 6" CENTER TO CENTER. MAKE SURE BACK SET IS ENOUGH TO CLEAR WIDTH OF PLATE. CTC MUST BE 34" - 48" FROM FINISHED FLOOR IN ORDER TO MEET ADA COMPLIANCE. TRIMCO RECOMMENDS INSTALLING BOTTOM HOLE AT 38" ABOVE FINISHED FLOOR. HOLE SIZE IS 3/8".

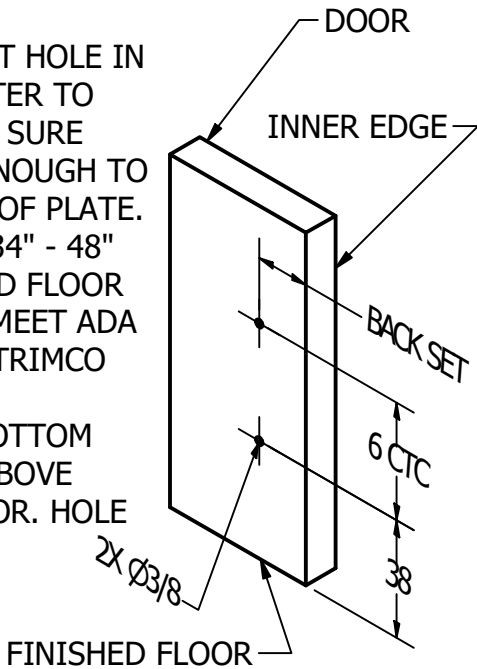

### OVERVIEW


INSTALLATION GUIDE FOR 1035, ULTIMATE RESTROOM PULL PRODUCTS. THIS INCLUDES BOTH HEALTHY HARDWARE AND STANDARD PULL. DRILL AND SCREW DRIVER ARE NEEDED TO INSTALL.

### PART LIST

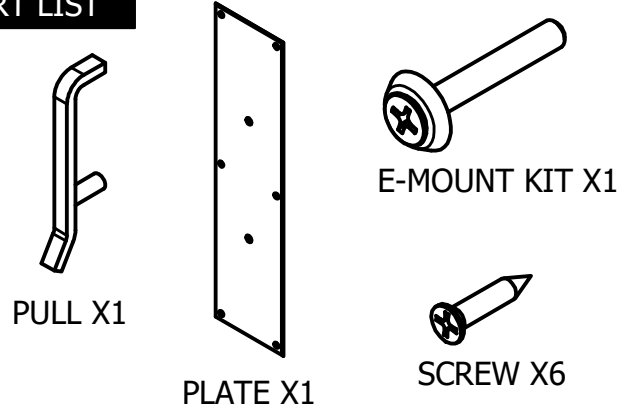


### STEP 2

PUT PLATE UP TO PREPPED DOOR AND SLIDE E-MOUNT KIT MACHINE SCREWS THROUGH E-MOUNT KIT FINISH WASHER AND DOOR FROM OPPOSITE SIDE OF PLATE SO THAT PLATE RESTS ON THE TWO MACHINE SCREWS.

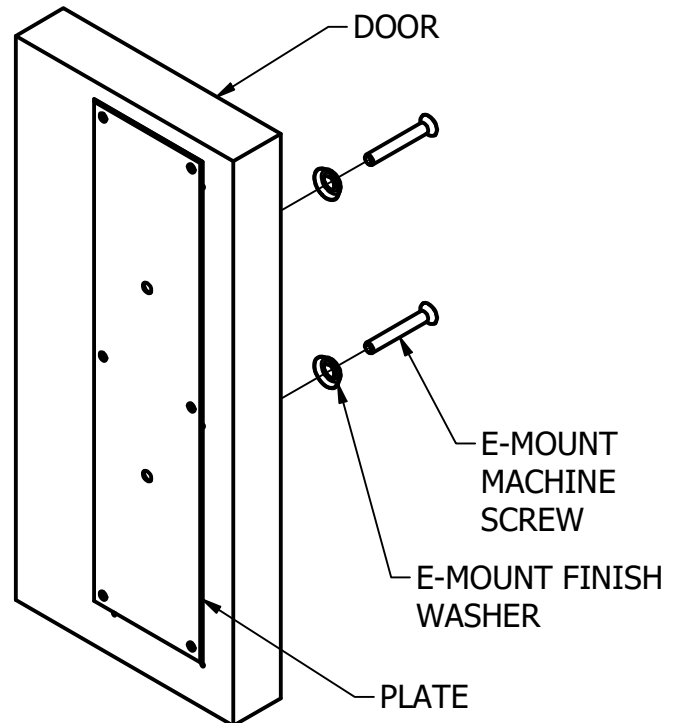

### STEP 3.1

TIGHTEN E-MOUNT SCREWS INTO PULL MOUNT LOCATIONS.

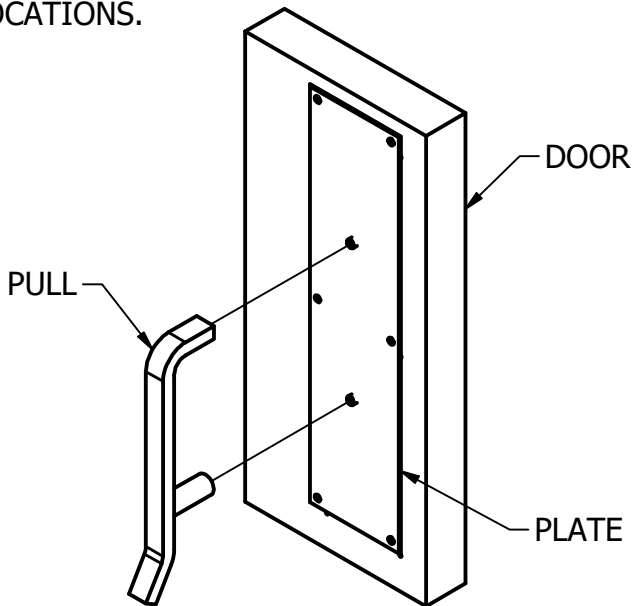

CONTINUED >>>




# Trimco®

SINCE 1949

TRIANGLE BRASS MANUFACTURING  
1351 ROCKY POINT DRIVE, OCEANSIDE, CA 92056  
WWW.TRIMCOHARDWARE.COM  
CSR@TRIMCOHARDWARE.COM  
323.262.4191


## STEP 4

SCREW IN THE #5 SCREWS IN THE PERIMETER HOLES ON THE PLATE.

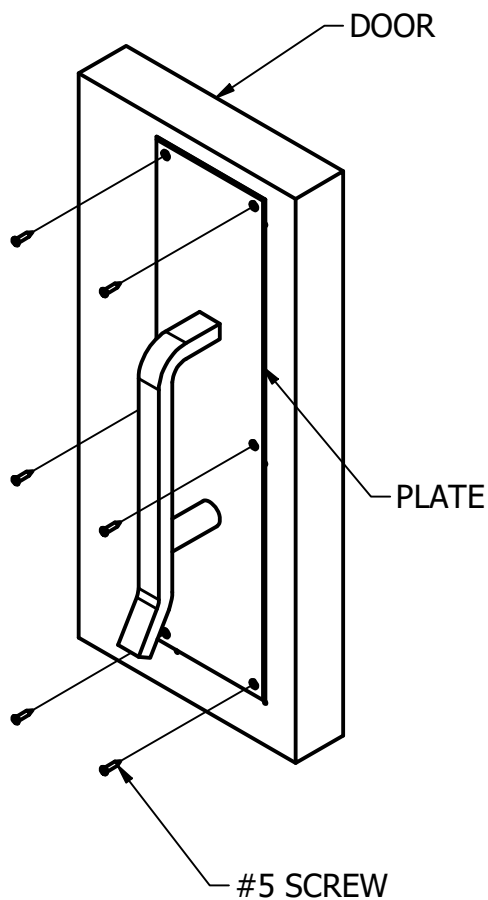


## STEP 3.2

PULL CAN BE PLACED EITHER FACING UP OR DOWN.

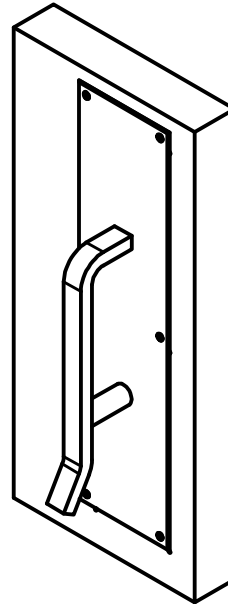

FACING  
DOWN  
INSTALLATION

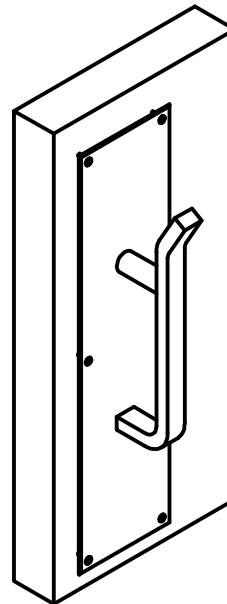

FACING  
UP  
INSTALLATION

## NOTES

THIS TEMPLATE IS PROVIDED FOR USE ON THE JOB FOR WHICH IT WAS REQUESTED. TRIMCO RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT NOTICE. TRIMCO WILL NOT BE RESPONSIBLE FOR ERRORS OR DAMAGE CAUSED BY USE OF OUT-OF-DATE TEMPLATES.