




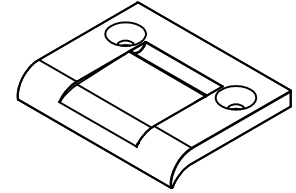

FOR USE WITH 1559 ROLLER LATCH.



SECTION C-C
SCALE 1 : 1

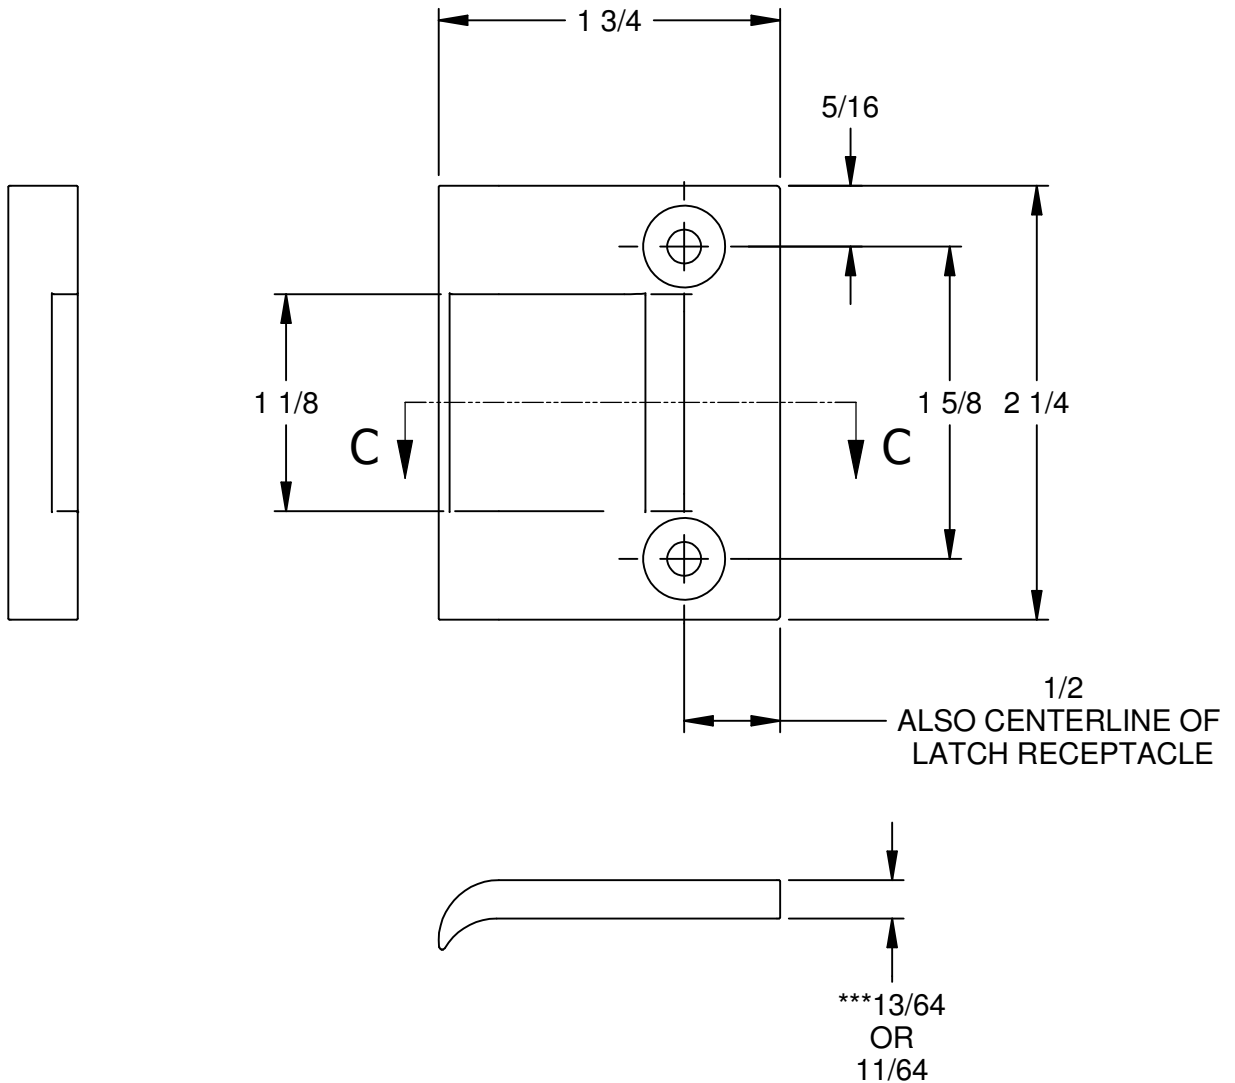

SUPPLIED WITH TWO (2) #8 X 3/4 FLAT HEAD, PHILLIPS DRIVE COMBO SCREWS


*** AS A GENERAL RULE, STRIKES ORDERED IN A 626 FINISH ARE 11/64" THICK;
STRIKES IN ALL OTHER FINISHES ARE 13/64".

REV A: REWORDED *** NOTE, SHEETS 1 AND 2, SUPERCEDES 17 SEPT 08 VERSION, MF, HS, JG, 4-12-16

NOTE: This template is provided for use only on the job for which is was requested.
Trimco reserves the right to make design changes without notice. Trimco will
not be responsible for errors or damage caused by the use of out-of-date templates.

DATE

12 APRIL 2016

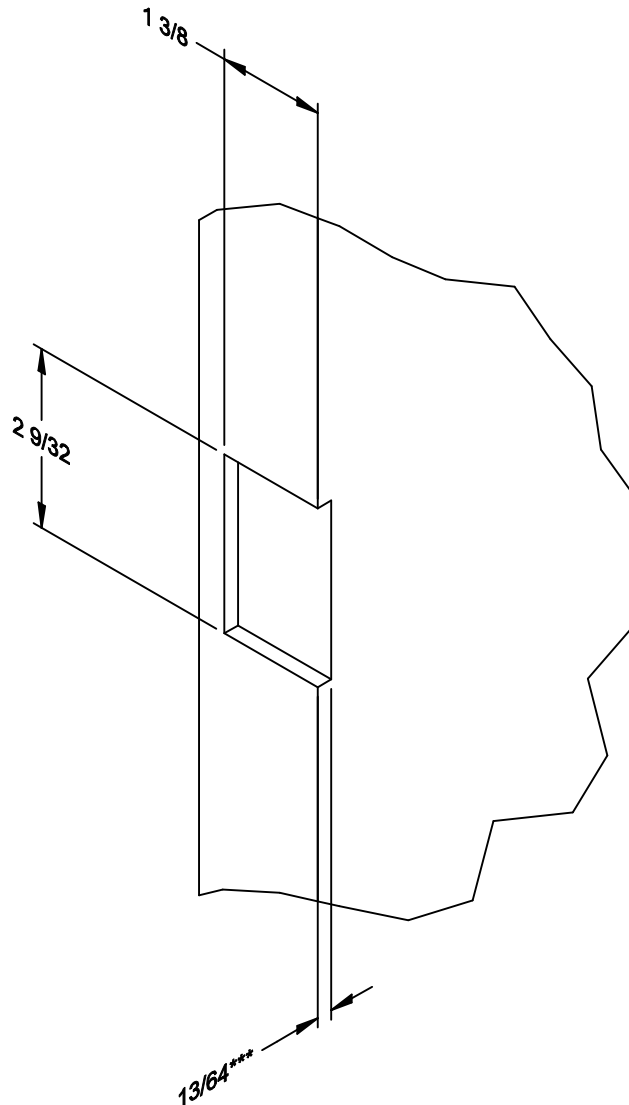

*** DEPTH OF CUT WILL VARY. AT THIS POINT TRIMCO'S 1559A STRIKES COME IN TWO DIFFERENT THICKNESSES - 13/64 AND 11/64 INCHES. THE IDEA IN MOUNTING THESE STRIKES IS THAT THEY SIT FLUSH WITH THE DOOR JAM. IF THE STRIKE IS 13/64 INCHES THICK THEN THE CUT SHOULD BE 13/64 DEEP. IF THE STRIKE IS 11/64 INCHES THICK THEN THE CUT SHOULD BE 11/64 DEEP.

*** AS A GENERAL RULE, STRIKES ORDERED IN A 626 FINISH ARE 11/64" THICK; STRIKES IN ALL OTHER FINISHES ARE 13/64".
BEST PRACTICE IS TO INSPECT THE STRIKES PRIOR TO PREP.