

TEMPLATE NO.

19271  
SHT 1 OF 4



3528 Emery Street  
PO BOX 23277  
Los Angeles, CA 90023-0277  
(323)262-4191  
www.trimcobbw.com

PRODUCT

1074-1 & 1074-3 BARN DOOR  
TEMPLATE

### RIGHT HAND DOOR



IMPORTANT:  
READ ALL INSTRUCTIONS CAREFULLY  
BEFORE PREPARING DOOR

WOOD DOOR PREP  
(LATCH TEMPLATE)

WOOD FRAME PREP  
(STRIKE TEMPLATE)

Fold on dotted line. - Lay over edge of door.

Cut on dotted line - Place against door stop.

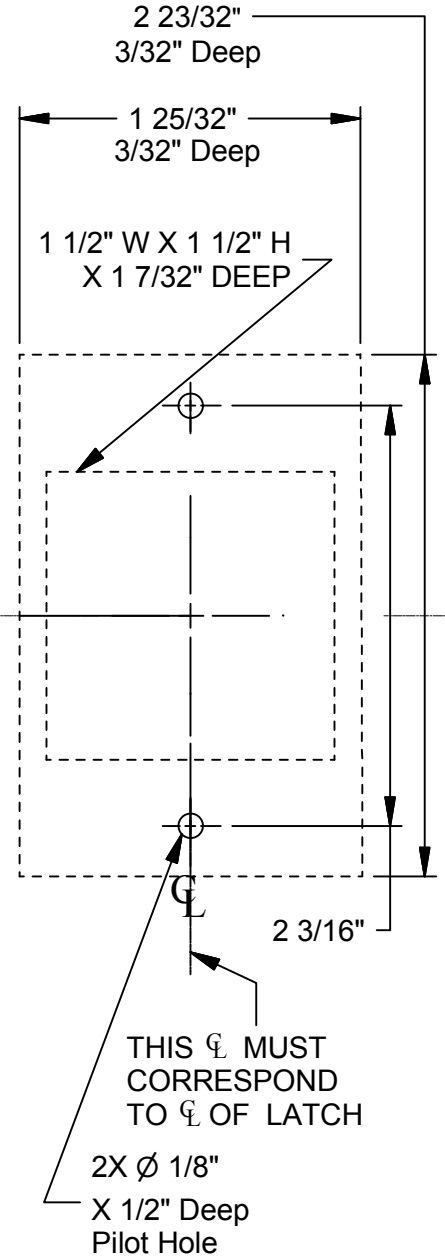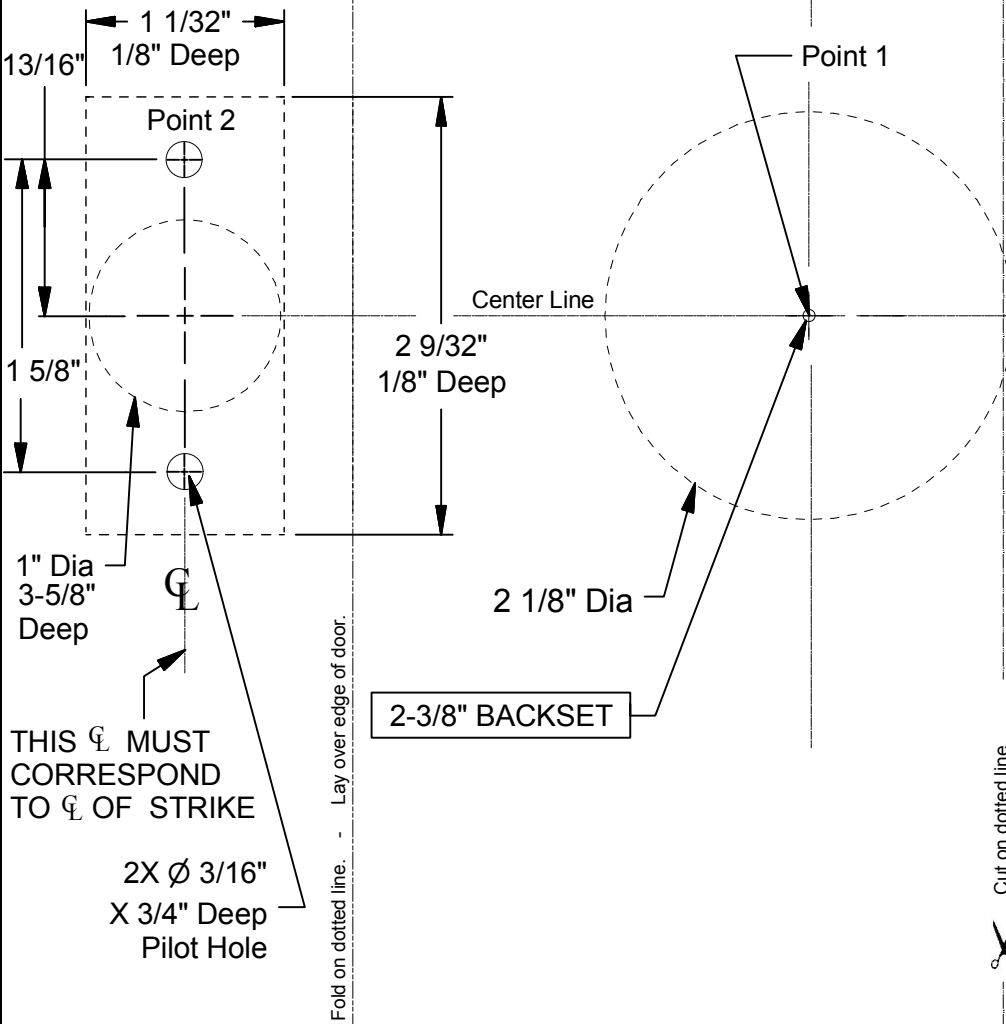

REVISION 2011:2 ADDED 2X  $\phi$  3/16" BACKSET GEOMETRY.  
SUPERSEDES REVISION 2009:2 ALL-ROOST GEOMETRY.  
REVISION 2011:1 CHANGED 2X  $\phi$  3/16" AND 3/4" DEPTH TO LATCH AND STRIKE  
SUPERSEDES REVISION 2007:1  
TEMPERATURE SENSITIVE GEOMETRY TO 1" DIA ON LATCH TEMPLATE  
REVISION 2011:1 REVISION 1000:1 1 1/2" DIA ON STRIKE TEMPLATE  
STRIKE TEMPLATE ON SHEETS 1 AND 2, 1 1/4" X 3/32" DEEP MAX 1" X 3/32" DEEP CONTINUED ON SHEET 2

NOTE: This template is provided for use only on the job for which it was requested. Trimco reserves the right to make design changes without notice. Trimco will not be responsible for errors or damage caused by the use of out-of-date templates.

DATE

04/06/16

TEMPLATE NO.



3528 Emery Street  
PO BOX 23277  
Los Angeles, CA 90023-0277  
(323)262-4191  
www.trimcobbw.com

PRODUCT

1074-1 & 1074-3 BARN DOOR  
TEMPLATE

19271  
SHT 2 OF 4

### LEFT HAND DOOR

IMPORTANT:  
READ ALL INSTRUCTIONS CAREFULLY  
BEFORE PREPARING DOOR

WOOD FRAME PREP  
(STRIKE TEMPLATE)

WOOD DOOR PREP  
(LATCH TEMPLATE)

Fold on dotted line. - Place against door stop.



Fold on dotted line. - Lay over edge of door.

Fold on dotted line. - Place against door stop.

Fold on dotted line. - Lay over edge of door.

Cut on dotted line

Cut on dotted line

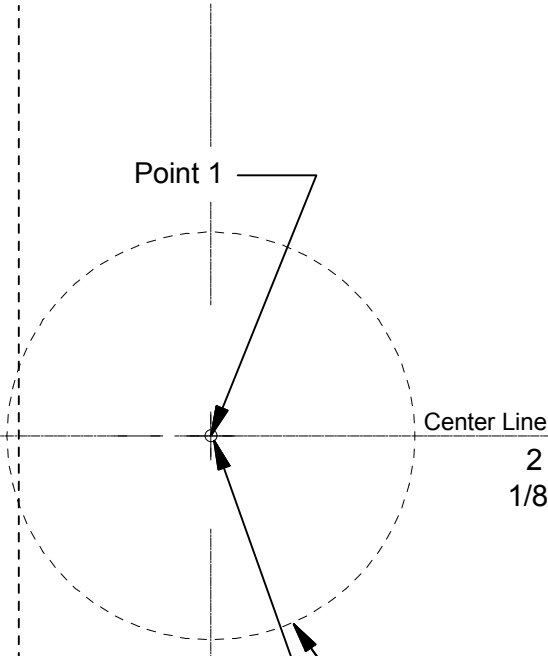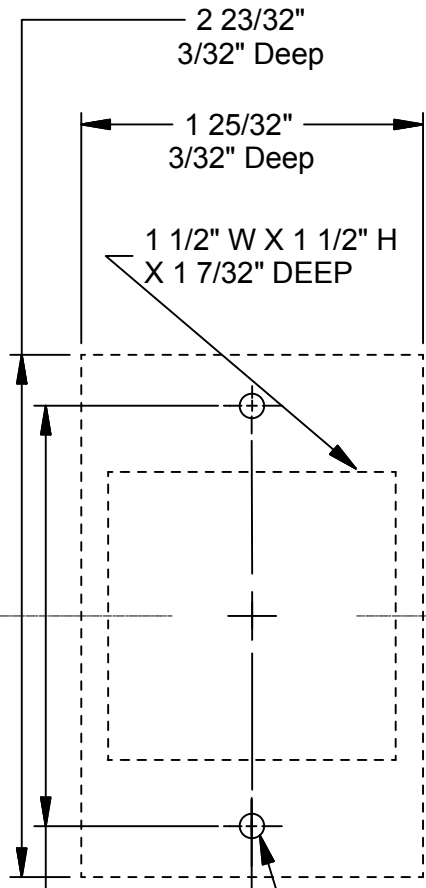

THIS  $\phi$  MUST CORRESPOND TO  $\phi$  OF LATCH

THIS  $\phi$  MUST CORRESPOND TO  $\phi$  OF STRIKE

CONTINUED FROM SHEET 1  
REVISION 02/16: RECALC. 1/8" DEEP FROM 1/16" DEEP ON SHEETS 1 AND 2  
REVISION 01/14: 2X Ø 1/8" DIA. ADDED 1/8" AND 1/16" ON SHEETS 1 AND 2  
REVISION 07/14: 2X Ø 1/8" DIA. ADDED 1/8" TO 2X Ø 1/8" DIA. AND 2X Ø 1/8" DEEP  
PILOT HOLES TO STRIKE TEMPLATE. ADDED 2X Ø 1/8" X 1/2" DEEP PILOT HOLES TO LATCH TEMPLATE.  
REVISION 05/14: 2X Ø 1/8" DIA. ADDED 1/8" AND 1/16" ON SHEETS 1 AND 2. LATCH DIA. 2X Ø 1/8" DIA.  
PILOT HOLES TO STRIKE TEMPLATE.  
REVISION 03/14: 2X Ø 1/8" DIA. ADDED 1/8" AND 1/16" ON SHEETS 1 AND 2. LATCH DIA. 2X Ø 1/8" DIA.  
PILOT HOLES TO STRIKE TEMPLATE.  
ADDED 2X Ø 1/8" X 1/2" DEEP WOOD DOOR PREP LATCH TEMPLATE TO LATCH TEMPLATE AND 1 1/4"  
X 1/2" DEEP WOOD DOOR PREP LATCH TEMPLATE TO LATCH TEMPLATE.  
WOOD FRAME PREP (STRIKE TEMPLATE) AND STRIKE TEMPLATE ADDED NEW SHEETS 1 AND 2.  
REVISION 02/14: 1/8" DIA. ADDED 1/8" AND 1/16" ON SHEETS 1 AND 2 TO OPPOSITE OF PREVIOUS.

NOTE: This template is provided for use only on the job for which it was requested. Trimco reserves the right to make design changes without notice. Trimco will not be responsible for errors or damage caused by the use of out-of-date templates.

DATE  
04/06/16


**RIGHT HAND DOOR**

IMPORTANT:  
READ ALL INSTRUCTIONS CAREFULLY  
BEFORE PREPARING DOOR

**DOOR PREP  
(LATCH TEMPLATE)**

Fold on dotted line. - Lay over edge of door.

Fold on dotted line. - Lay over edge of door.

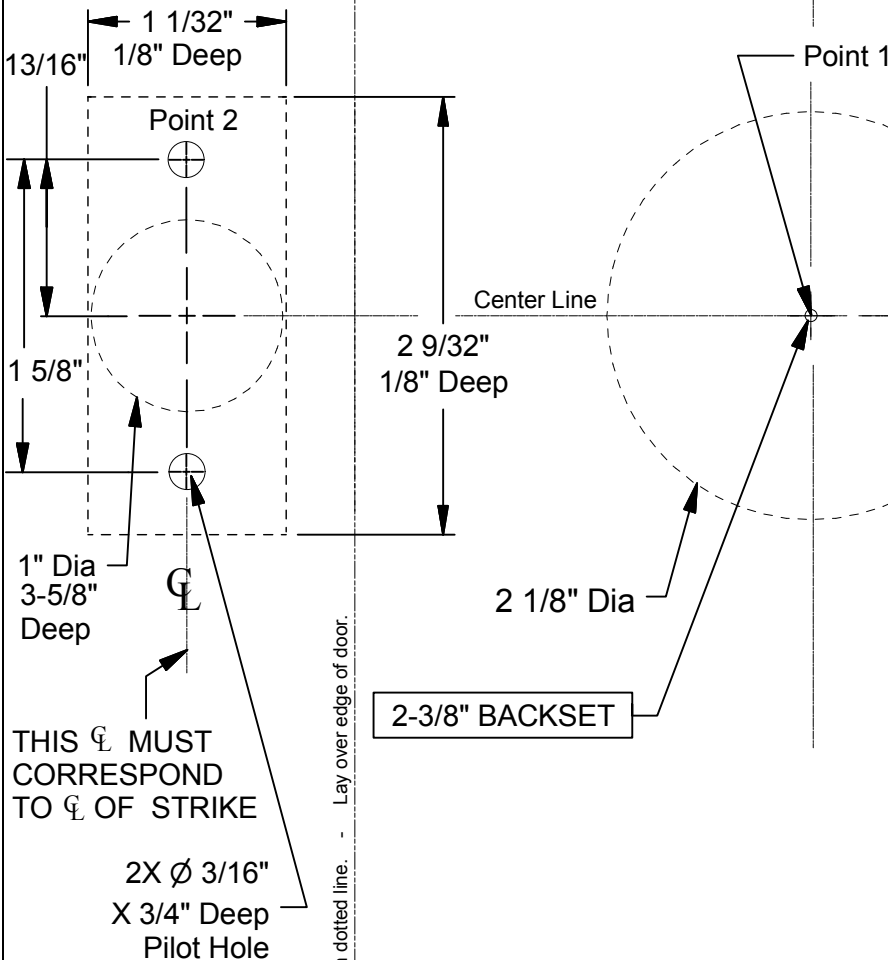

NOTE 1:

IF THE STRIKE IS SURFACE MOUNTED, THERE WILL BE A GAP BETWEEN THE FRAME AND THE DOOR.


NOTE 2:

IF THE STRIKE IS TO BE FLUSH MOUNTED, REFER TO SHEET 1 FOR FRAME PREP SPECIFICATIONS.

**METAL FRAME PREP  
(STRIKE TEMPLATE)**

Fold on dotted line. - Place against door stop.

Fold on dotted line. - Place against door stop.

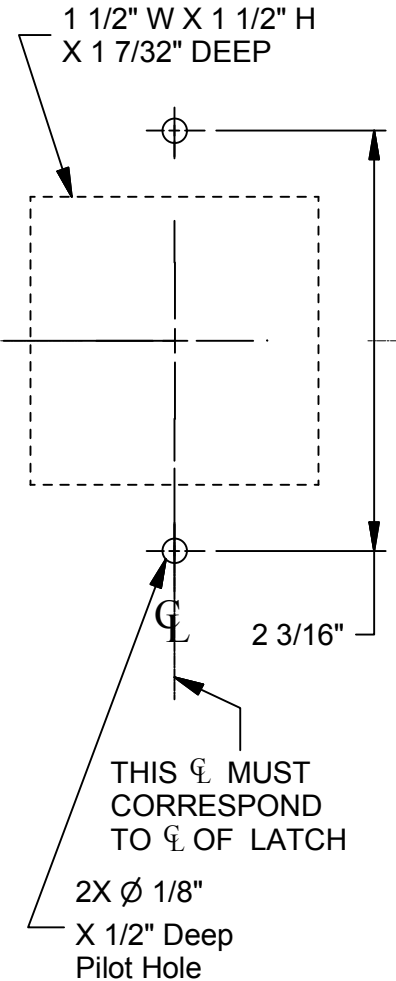

THIS FRAME PREP IS FOR SURFACE-MOUNTED STRIKES




**LEFT HAND DOOR**

**IMPORTANT:  
READ ALL INSTRUCTIONS CAREFULLY  
BEFORE PREPARING DOOR**

**METAL FRAME PREP  
(STRIKE TEMPLATE)**

**DOOR PREP  
(LATCH TEMPLATE)**

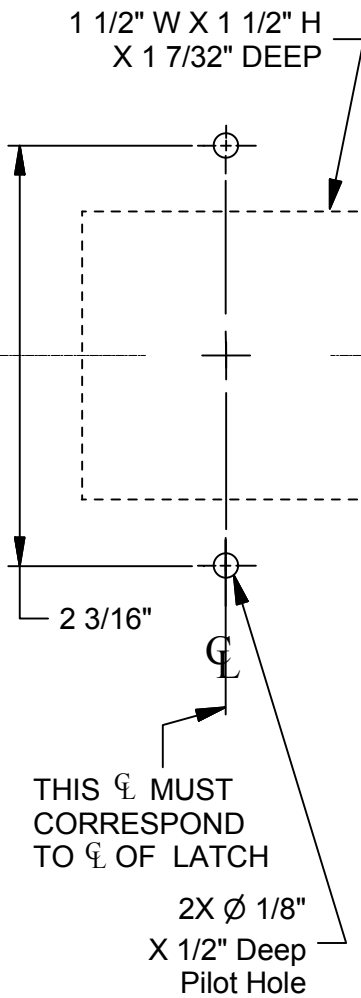


Fold on dotted line. - Place against door stop.

Cut on dotted line




Fold on dotted line. - Place against door stop.

Cut on dotted line

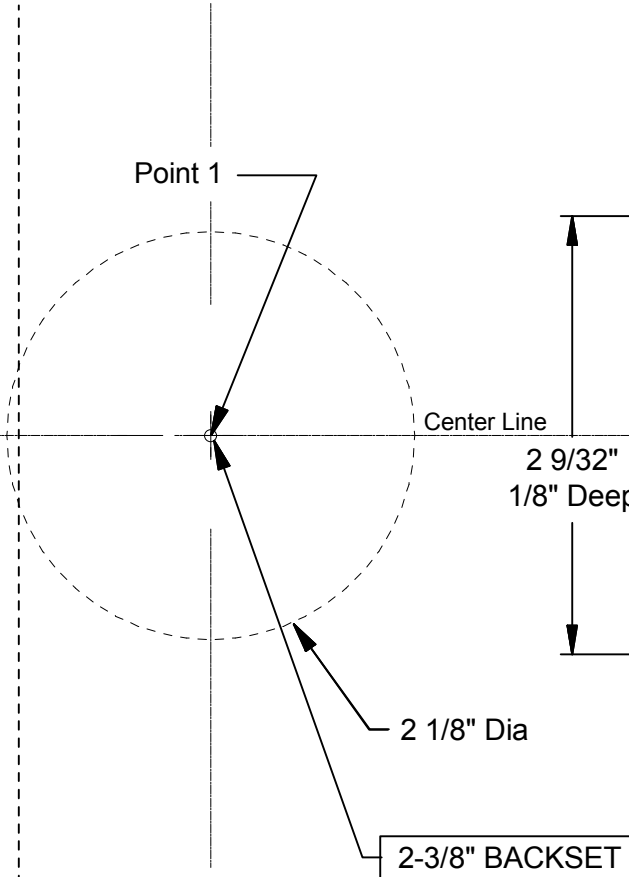

Fold on dotted line. - Lay over edge of door.

Fold on dotted line. - Lay over edge of door.

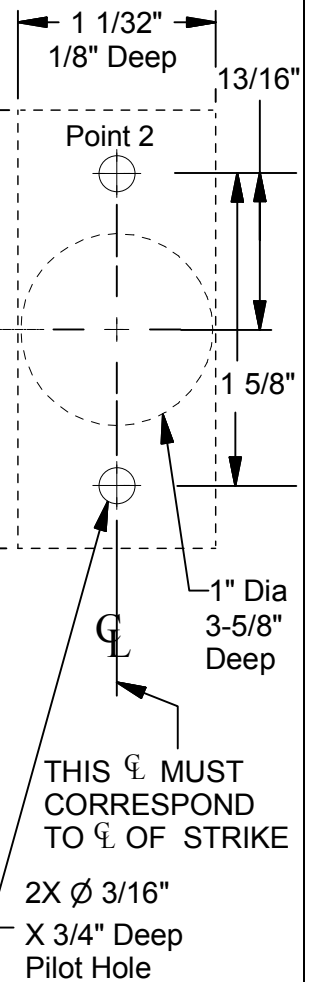

NOTE 1:  
IF THE STRIKE IS SURFACE MOUNTED, THERE WILL BE  
A GAP BETWEEN THE FRAME AND THE DOOR.

NOTE 2:  
IF THE STRIKE IS TO BE FLUSH MOUNTED, REFER TO  
SHEET 2 FOR FRAME PREP SPECIFICATIONS.