

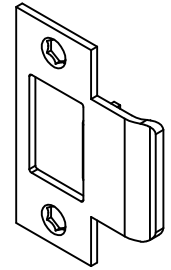
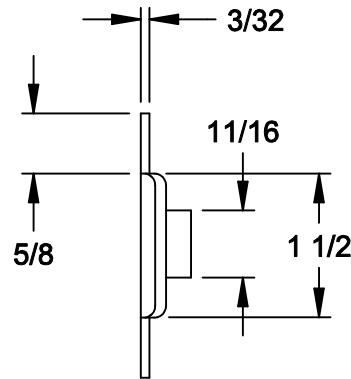
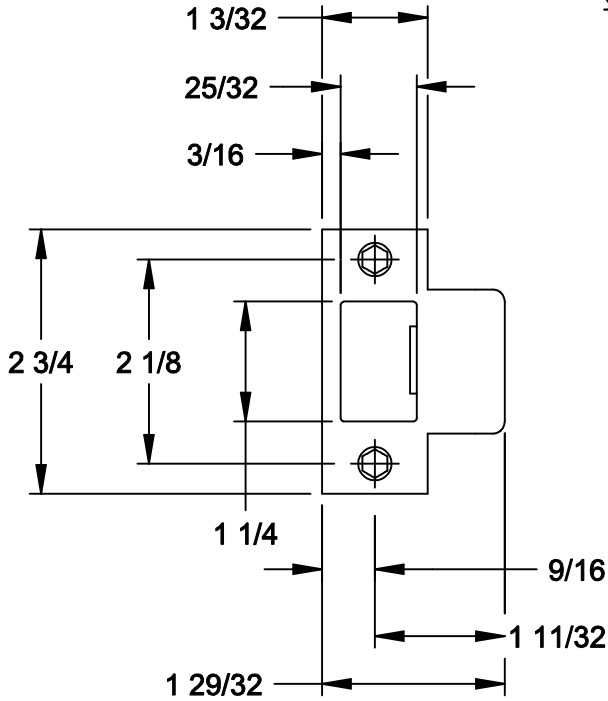
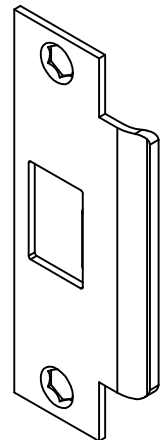


**3651 STRIKE**

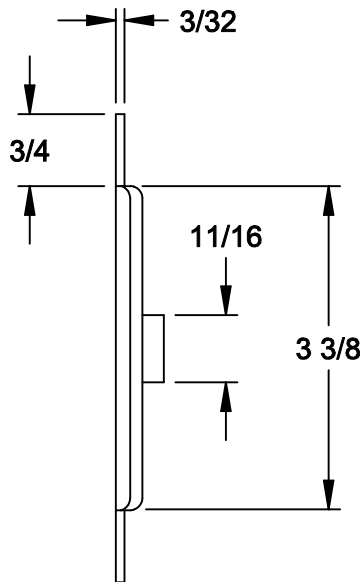

SUPPLIED WITH: TWO (2) #8 X 3/4" UNDERCUT  
FLAT HEAD, PHILLIPS DRIVE  
COMBO MOUNTING SCREWS

**3652 STRIKE**

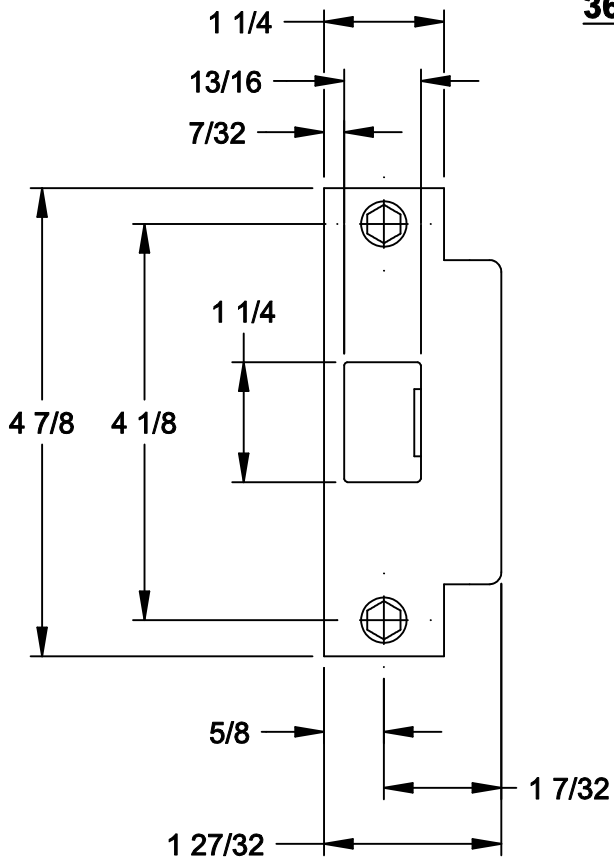

SUPPLIED WITH: TWO (2) #12 X 1 UNDERCUT  
FLAT HEAD PHILLIPS DRIVE COMBO  
MOUNTING SCREWS

\*\*\*IF USING 1/4" TORX SECURITY SCREWS FOR MOUNTING  
THEN THE HOLES MUST BE MODIFIED. IF MODIFIED THE  
#12 COMBO SCREWS PROVIDED WILL NOT WORK WITH  
THE STRIKE