



TRIANGLE BRASS MANUFACTURING
1351 ROCKY POINT DRIVE, OCEANSIDE, CA 92056
WWW.TRIMCOHARDWARE.COM
CSR@TRIMCOHARDWARE.COM
323.262.4191

STEP 1

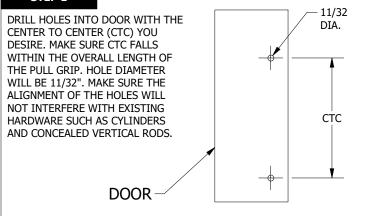

STEP 3


INSERT SOCKET HEAD CAP SCREWS INTO STANDOFFS. DO NOT TIGHTEN INCASE SMALL ADJUSTMENTS NEED TO BE MADE LATER.

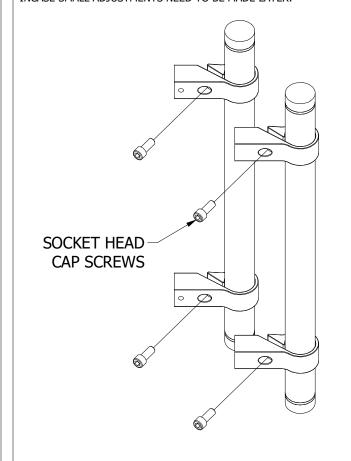

OVERVIEW


STRAIGHT ADJUSTABLE STANDOFF LADDER PULL, G-MOUNT (AP311G) INSTALLATION GUIDE

MAKE SURE ALL PARTS ARE RECEIVED IN THE QUANTITIES SHOWN. GRIP X2 SHOULDER BOLT X2 EXTERIOR INTERIOR SOCKET HEAD CAP SCREW X4 SET SCREW X4

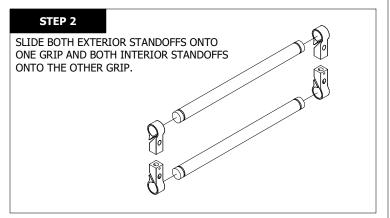

STEP 4

ATTACH EXTERIOR PULL TO DOOR USING SHOULDER BOLTS PROVIDED. FLAT HEAD SCREW DRIVER IS NEEDED (NOT PROVIDED). ADJUST STANDOFFS AS NEEDED IN ORDER TO MAKE SURE ALIGNMENT IS CORRECT. TIGHTEN SOCKET HEAD CAP SCREWS ONCE STANDOFFS ARE IN PLACE.

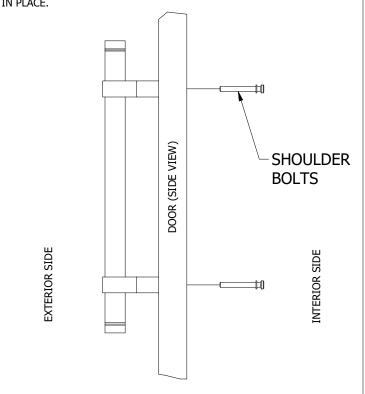


DATE: 7/16/2021 | REV: 01



TRIANGLE BRASS MANUFACTURING
1351 ROCKY POINT DRIVE, OCEANSIDE, CA 92056
WWW.TRIMCOHARDWARE.COM
CSR@TRIMCOHARDWARE.COM
323.262.4191


STEP 6

INSERT SET SCREWS INTO STANDOFFS UNTIL INTERIOR PULL IS SECURE AGAINST DOOR.

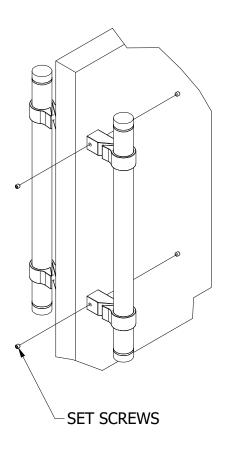

STEP 5

PLACE INTERIOR PULL STANDOFFS OVER SHOULDER BOLT HEADS. ADJUST STANDOFFS AS NEEDED. TIGHTEN SOCKET HEAD CAP SCREWS ONCE STANDOFFS ARE IN PLACE.

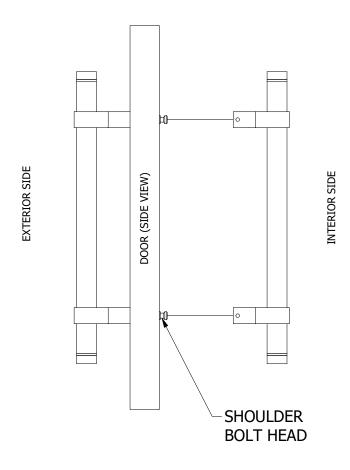

NOTES

- -ITEMS SHOWN NOT TO SCALE
- -ALL DIMENSIONS IN INCHES UNLESS SPECIFIED
- -THIS INSTALLATION GUIDE IS PROVIDED FOR USE ONLY ON THE JOB FOR WHICH IT WAS REQUESTED.
- -TRIMCO RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT NOTICE.
- -TRIMCO WILL NOT BE RESPONSIBLE FOR ERRORS OR DAMAGE CAUSED BY THE USE OF OUT-OF-DATE TEMPLATES.
- -FOR THE LATEST PRODUCT INFORMATION GO TO: WWW.TRIMCOHARDWARE.COM
- -FOR ADDITIONAL HELP, PLEASE CONTACT CUSTOMER SERVICE VIA EMAIL AT CSR@TRIMCOHARDWARE.COM