



# Trimco®

SINCE 1949

TRIANGLE BRASS MANUFACTURING  
1351 ROCKY POINT DRIVE  
OCEANSIDE, CA 92056  
WWW.TRIMCOHARDWARE.COM  
CSR@TRIMCOHARDWARE.COM  
323.262.4191



## OVERVIEW

# UHF211 (INSWING VERSION)

## HANDS FREE SLIDE LOCK INSTALLATION GUIDE

FOLLOW THE INSTRUCTIONS BELOW FOR STEP BY STEP INSTALLATION.  
SCAN QR CODE FOR INSTALLATION VIDEO. FOR INSTALLATION HELP,  
PLEASE CONTACT TRIMCO CUSTOMER SERVICE.


## STEP 1

REMOVE ALL EXISTING DOOR HARDWARE INCLUDING THE DEADBOLT IF NEEDED.

### PRO TIP:

NEW INSTALLATIONS FOLLOW ANSI 161 CYLINDRICAL DOOR PREPARATION.  
RETROFIT COMPATIBILITY TO ANSI 161 CYLINDRICAL DOOR PREPARATION.

**NOTE: ONLY COMPATIBLE WITH 1-3/4" THICK DOORS.**

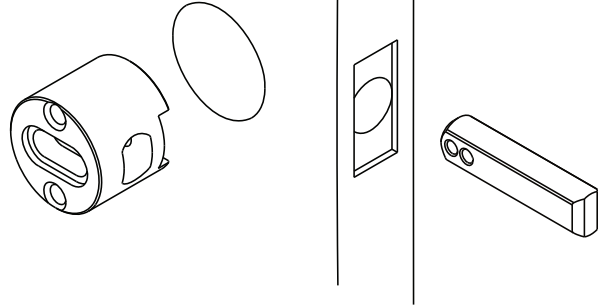

INTERIOR SIDE:  
INSERT CARRIER AS SHOWN.

INSERT BOLT INTO CARRIER  
NOTE: HOLES INDICATE  
FOR 2 3/4 OR 2 3/8 DOOR WIDTH  
SEE STEP 2


## PARTS LIST

\*NOT TO SCALE\*. IF ANY PARTS ARE MISSING,  
PLEASE CONTACT TRIMCO CUSTOMER SERVICE.

### BOX 1 ITEMS


- (A) 1X INTERIOR ASSEMBLY
- (B) 1X EXTERIOR PLATE
- (C) 1X EXTERIOR MACHINE SCREWS, 10-24 X 3/4
- (D) 1X CARRIER
- (E) 1X LOCKING BOLT
- (F) 1X LATCH FACE AND SCREWS
- (G) 1X DOOR STRIKE AND SCREWS
- (H) 16X INTERIOR AND EXTERIOR PLATE WOOD/SHEETMETAL SCREWS
- (I) 1X INDICATOR WITH OPEN & CLOSE STICKERS
- (J) 1X INTERIOR OPEN AND CLOSE STICKERS
- (K) 1X EMERGENCY OPEN TOOL
- (L) 1X HH SIGN STICKER (FOR HEALTHY HARDWARE ONLY)
- (M) 1X HANDS FREE STICKER

## PARTS

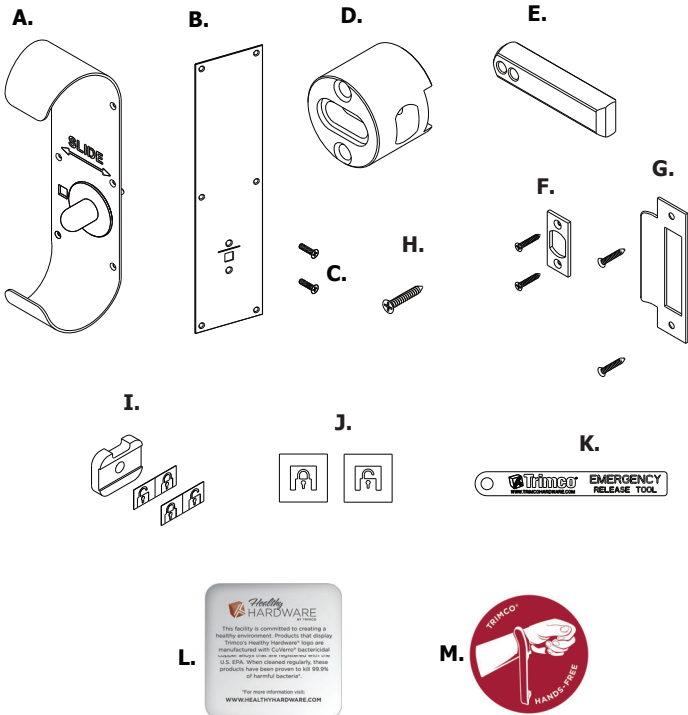

## STEP 2

INSTALL INTERIOR INDICATOR DECALS:  
ADHESIVE IS ON THE GRAPHIC SIDE OF DECAL, AND MUST BE  
INSTALLED ON THE BACK OF THE INTERIOR ASSEMBLY TO BE  
VISIBLE THROUGH THE INDICATOR WINDOWS.

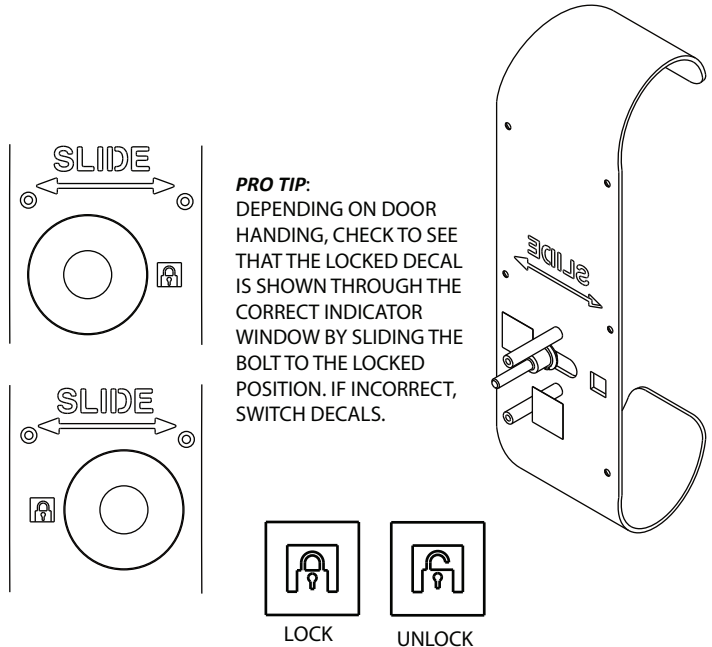

## TOOLS

TOOLS BELOW MAY BE REQUIRED. TOOLS NOT INCLUDED.

- CROSSHEAD SCREW DRIVER
- PILOT HOLE DRILL (SIZE 3/32)




# Trimco®

SINCE 1949

### STEP 3


INSTALL INTERIOR ASSEMBLY (STUDS THROUGH CARRIER).

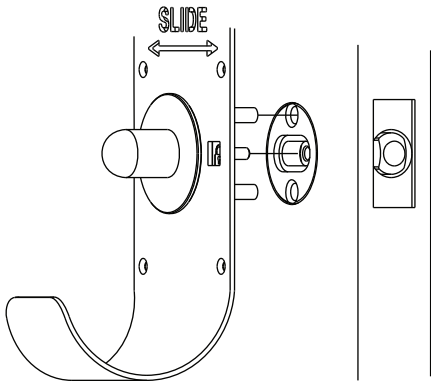

**PRO TIP:** USE TAPE TO HOLD ASSEMBLY IN PLACE WHILE THE EXTERIOR PLATE IS BEING INSTALLED.


### STEP 5

USE LEVEL OR MEASURE FROM DOOR EDGE TO ALIGN INTERIOR ASSEMBLY AND EXTERIOR PLATE.

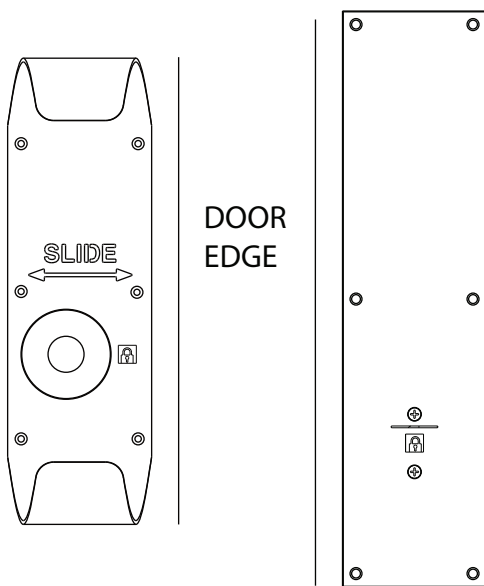

### STEP 4


INSTALL INDICATOR WITH LEFT OR RIGHT DECAL, DEPENDING ON DOOR HANDING.

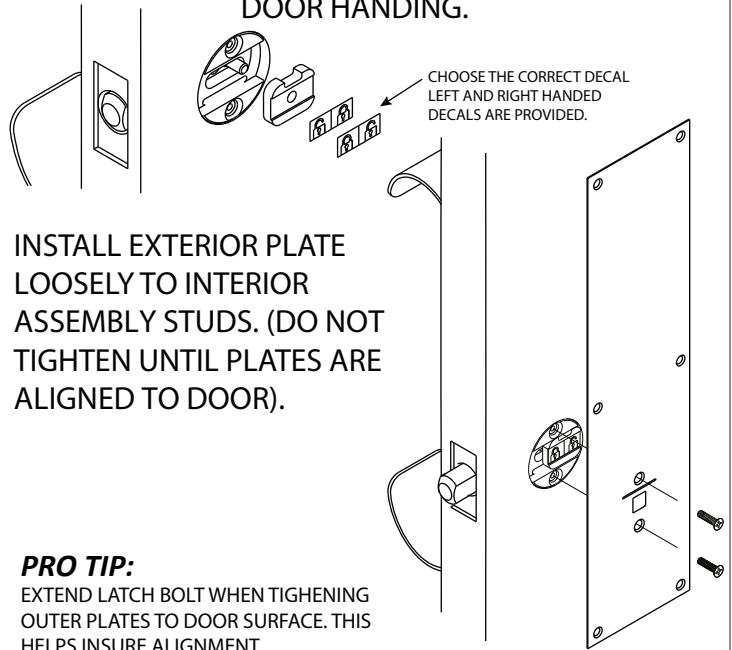

### STEP 6

INSTALL EXTERIOR PLATE DOOR SCREWS.

INSTALL INTERIOR ASSEMBLY MOUNTING SCREWS AND LATCH FACE.

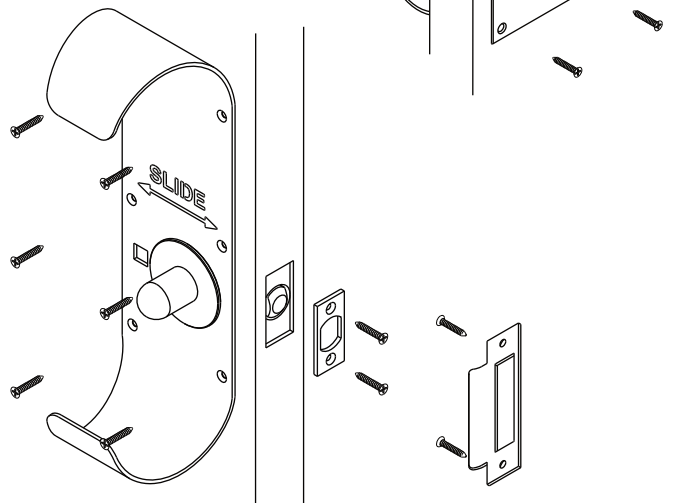

**PRO TIP:** TO INSURE PROPER FUNCTION LATCH PLATE AND STRIKE MUST BE PROPERLY ALIGNED.